



MODEL 485B39

DIGITAL ICP® USB SIGNAL CONDITIONER

- Easily acquire, save, and share data on-the-go
- Plug & play, Portable sensor digitization
- High-quality, 24-bit, broad-frequency measurements
- 2-channel ICP (IEPE) sensor inputs
- Compatible with MATLAB®, LabVIEW™, and a variety of time and frequency signal analysis programs
- Windows, iOS, Android, macOS, and Linux ready


TYPICAL APPLICATIONS

- General dynamic signal digitizing
- Binaural recordings
- Sound & vibration measurements: isolation, transmissibility, correlation studies, and resonance testing
- Industrial IoT applications
- Educational laboratory experiments

SIGNAL CONDITIONING IN YOUR POCKET

A pocket-sized, dual-channel ICP® (IEPE) digital signal conditioner, Model 485B39 offers standard USB audio digital output. Plug & play signal conditioning makes for quick setup and intuitive functionality without the need for driver installation. The 485B39 powers ICP sensors through BNC connections while digitizing their signals over USB. Simply plug the unit into a USB port and view signals from accelerometers, microphones, hammers, or any other ICP-type sensor.

Existing third party Windows®, iOS®, Android™, macOS®, or Linux® software can be used to acquire time waveforms, frequency spectra, overall RMS measurements, and octave measurements or simply record data for further analysis. The small form factor, versatility, and powerful software options make this the perfect tool for taking measurements on-the-go. Whether you're just learning about sensing; taking measurements on a daily basis; or simply want to add digital, portable functionality to your existing sensors; the 485B39 is a practical addition to your tool set.

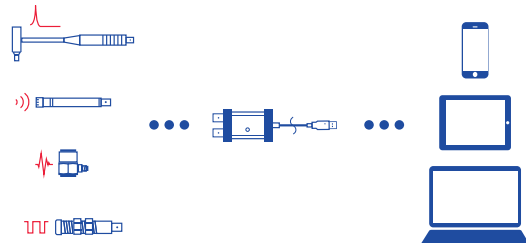


SPECIFICATIONS	
Performance	
Channel Count	2
Voltage Range (Nominal)	± 10 V pk ^[1]
ADC Resolution	24-bit ^[2]
Frequency Range (± 5 %)	0.8 Hz to 20.7 kHz
Sample Rate	48, 44.1, 32, 22.05, 16, 11.025, 8 kHz
Anti-Aliasing Low-Pass Filter (-3 dB) at 48 kHz	22.9 kHz ^[3]
AC High-Pass Filter (-3 dB) (48 kHz to 8 kHz)	1 Hz to 0.5 Hz ^[4]
Digital Output Interface	USB Class 1 Audio
Physical	
Temperature Range (Operating)	14 °F to +176 °F (-10 °C to +80 °C)
Temperature Range (Storage)	-40 °F to +176 °F (-40 °C to +80 °C)
Excitation Voltage to Sensor (± 5 %)	24 VDC
Constant Current Excitation (± 5 %)	4 mA
DC Power (USB)	< 500 mW (5 V at 100 mA)
Settling Time	1.5 s
Electrical Isolation (case)	Grounded
Data / Power Indicator	Green LED
Housing Material	Stainless Steel
Size (length x width x height)	2.4" x 1.5" x 0.7" (60 mm x 39 mm x 19 mm)
Weight	4.4 oz (125 grams)
Sensor Inputs	2 BNC Jacks
Digital Output	11" Integral Cable (28 cm Integral Cable)
USB Connector	Type A

Optional Versions
V485B39 – Voltage Inputs (No ICP Supply Current)
IV485B39 – ICP (CH 1), Voltage (CH 2)

Optional Accessories
MD821AM/A USB A to Lightning Camera Adaptor
USB A to USB OTG Adaptor
Inline ICP® Charge Converter (422Exx Series)

- [1] ± 8 V pk guaranteed
 [2] 16-bit selectable by software
 [3] Proportional to sample rate
 [4] Sample rate dependent (48 kHz to 8 kHz)

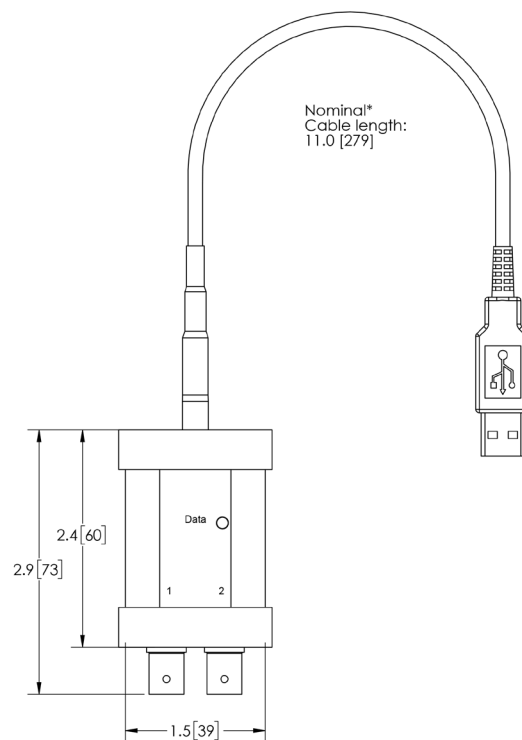

Model 485B39
 Outline Drawing
 Dimensions in inches [mm]

THE MODAL SHOP

AN MTS COMPANY

10310 Aerohub Boulevard, Cincinnati, OH 45215 USA

Toll-Free in the USA: 800 860 4867

Phone: 1 513 351 9919 | Email: info@modalshop.com

The Modal Shop, Inc. offers structural vibration and acoustic sensing systems and services for various applications in design and test laboratories as well as manufacturing plants. An extensive sound and vibration rental program, precision calibration systems, and both modal and vibration shakers are designed to simplify test phases. Non Destructive Testing Systems help manufacturers provide 100% quality inspection of metal components. The Modal Shop, Inc. is a subsidiary of PCB Piezotronics, Inc., and PCB® is a wholly owned subsidiary of MTS Systems Corporation.

© 2020 The Modal Shop, Inc. In the interest of constant product improvement, specifications are subject to change without notice. PCB®, ICP®, Swiveler®, Modally Tuned®, and IMI® with associated logo are registered trademarks of PCB Piezotronics, Inc. in the United States. ICP® is a registered trademark of PCB Piezotronics Europe GmbH in Germany and other countries. UHT-12™ is a trademark of PCB Piezotronics, Inc. SensorLine™ is a service mark of PCB Piezotronics, Inc. SWIFT® is a registered trademark of MTS Systems Corporation in the United States. All other trademarks are property of their respective owners.

DS-0186 revD



MTS Sensors, a division of MTS Systems Corporation (NASDAQ: MTSC), vastly expanded its range of products and solutions after MTS acquired PCB Piezotronics, Inc. in July, 2016. PCB Piezotronics, Inc. is a wholly owned subsidiary of MTS Systems Corp.; IMI Sensors and Larson Davis are divisions of PCB Piezotronics, Inc.; Accumetrics, Inc. and The Modal Shop, Inc. are subsidiaries of PCB Piezotronics, Inc.